




Instructions in resetting the controller

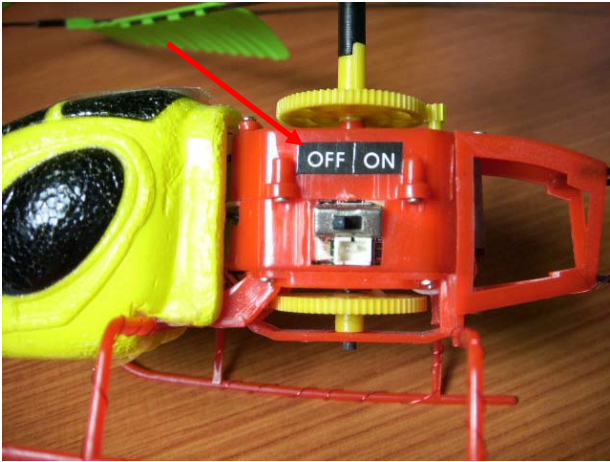


- 1) Make sure that the helicopter is in "OFF" position.

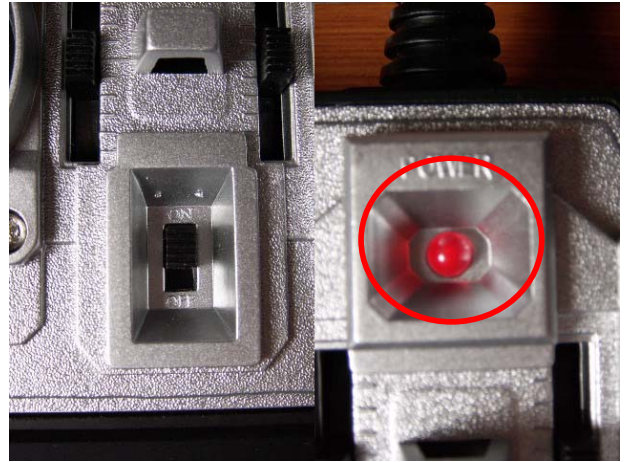


- 4) Switch "ON" the controller and you will notice that the LED is blinking.

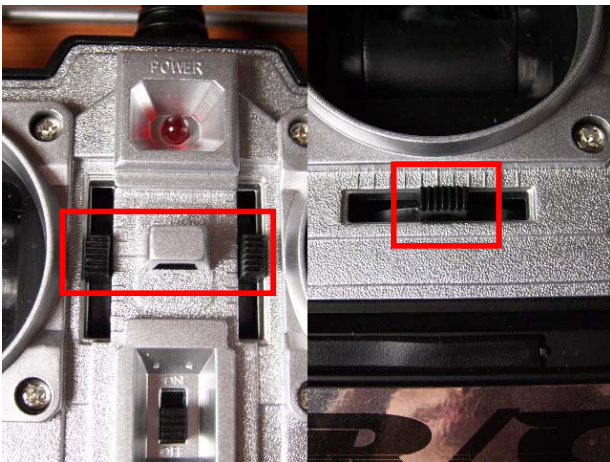


- 2) Make sure that the controller is in "OFF" position with the all trimmers in the "reset" position as shown in the picture above.

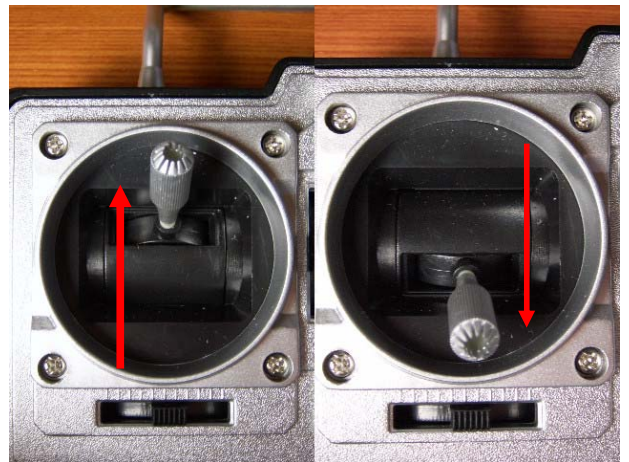

- 5) With the LED blinking, move the left toggle stick upwards fully and then move it back down to the end.

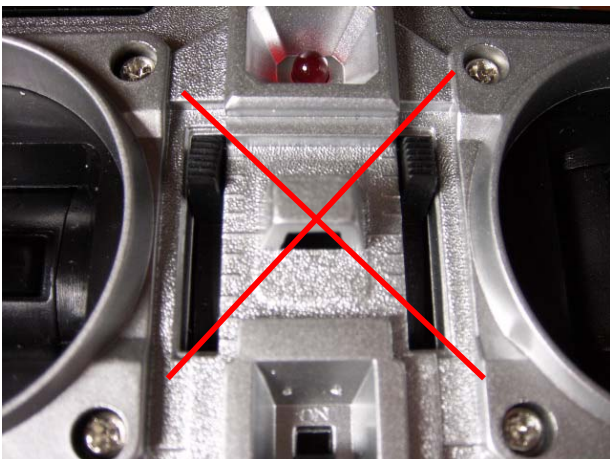

- 3) Above picture shows the trimmer in the wrong position.

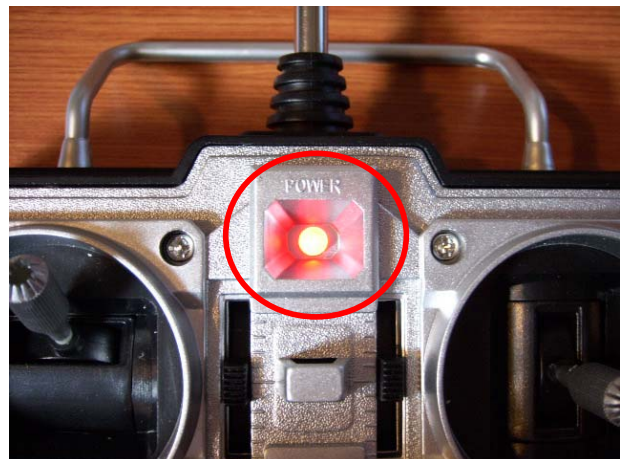

- 6) The LED will stop blinking and stabilize. The controller is ready to be use now.