

**ODYSSEY MARKETING**  
**ODY4945D**

**I-CHAIN AND PIN REPLACEMENT**  
**INSTRUCTIONS**



1) Check that the I-chains(circled in blue) and the pin(circled in green) are intact..



2) If any of the above is missing, use the replacement as follows:



3) Adjust the stabilizer bar and make sure that the holes on the vertical shaft and stabilizer bar are in line.



4) Using a pincer, insert the pin into the hole.



5) Gentle push the pin and make sure that the pin is fully inserted and the end is flush to the entrance. That completes the pin replacement




6) Hold the I-chain and gently align the hole against the holding point of the stabilizer bar.



7) Gently push the I-chain against the holding point and it will be "locked" in.



8) Now do the same for the loose end of the I-chain, align the hole to the holding point of the top propeller.

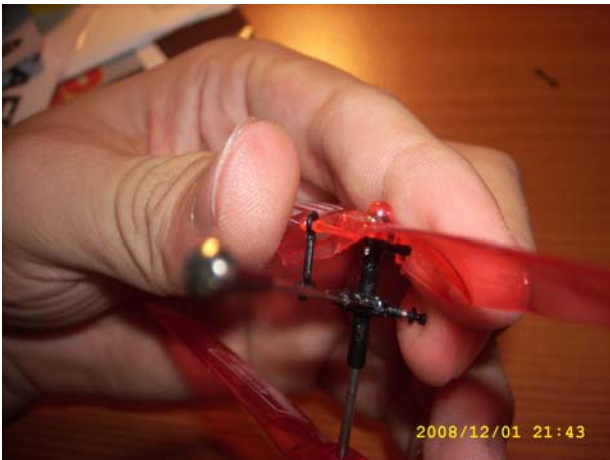

9) Gently push the I-chain against the holding point and it will be "locked" in. That completed the I-chain replacement.